



## Big Button Telephone



This file is available to view and download as a PDF at [www.aidapt.co.uk](http://www.aidapt.co.uk). Sight impaired customers can use a free PDF Reader (such as [adobe.com/reader](http://adobe.com/reader)) to zoom in and increase the text size for improved readability.

## Fixing and Maintenance Instructions




## Features

The telephone features include:

- a hands-free speaker phone with volume control
- big buttons which are easily readable
- a handset volume selector
- ringer HI/LO switch
- flash function for incoming calls
- last number redial function
- desktop and wall mounting options

## Location of Controls:

- |                    |                    |                 |
|--------------------|--------------------|-----------------|
| 1 AUTO Button      | 2 STORE Button     | 3 HOLD Button   |
| 4 SP-PHONE Volume  | 5 FLASH Button     | 6 REDIAL Button |
| 7 SP- PHONE Button | 8 RINGER Indicator | 9 RINGER Volume |
| 10 HANDSET Volume  |                    |                 |

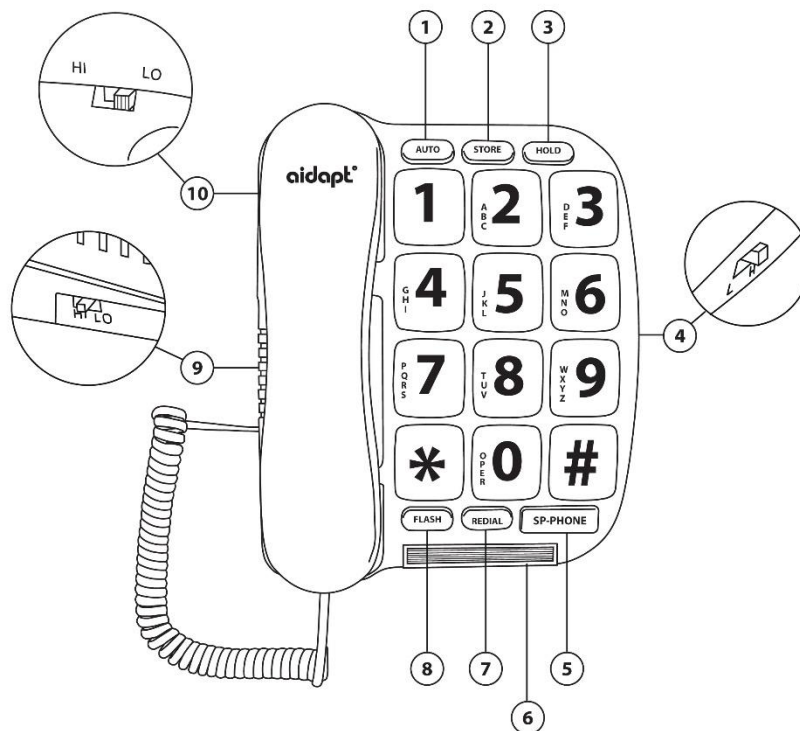

## BEFORE USE

Carefully remove all packaging and avoid using any sharp instruments as this may damage the surface of the product.

## INSTALLATION

1. Connect the coiled cord to the handset and the telephone base.
2. Then connect the telephone wire to the telephone set and wall jack.

## Operation

- 1. Ringer Volume**  
You may adjust the volume by using the HI/LO switch.
- 2. Ringer Indicator**  
LED light will flash when there is an incoming call.
- 3. Receiving a Call**  
You may pick up the handset or press the "SP-PHONE" button to use the hands-free option.
- 4. Ending a Call**  
Place the handset on its base, or press the "SP-PHONE" button if using the hands-free option.
- 5. Making a Call**
  - 5.1 Pick up the handset or press the "SP-PHONE" button if you wish to use hands-free.
  - 5.2 Listen for a dial tone, then key in the number you wish to call.
  - 5.3 To end a call, put the handset on its base, or if using hands-free, press the "SP-PHONE" button.
- 6. Redialling**  
Pick up the handset, or press the "SP-PHONE" button, listen for the dial tone then press the "REDIAL" button.
- 7. Flash Function**  
If you have subscribed to a call waiting service, use the flash button to take the next call.
- 8. Holding a Call**
  - 8.1 To put a caller on hold, press the "HOLD" button.
  - 8.2 To resume a call, press the "SP-PHONE" button.
- 9. Storing Telephone Numbers**
  - 9.1 Pick up your handset, press the "STORE" button and dial the number you wish to save.
  - 9.2 Press "AUTO" and then a number (0-9) button for number location then your number will be saved.
- 10. Speed Dial Stored Numbers**
  - 10.1 Pick up your handset, or press the "SP-PHONE" button
  - 10.2 Press "AUTO" and select correct memory location button (0-9) on the keypad. The telephone will automatically dial out the number.

## **IMPORTANT NOTES**

### **Telephone Connections**

The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages, as defined in the Standard EN60950). Following a power cut, the call in progress as well as the date and time settings is lost.

### **Hearing Aid**

Please note this telephone works by sending radio signals between the base unit and the handset. These signals may interfere with some hearing aids, causing a humming noise.

### **Safety Precautions**

- Do not allow the handset to come into contact with liquids or moisture.
- Do not open the handset or base unit as this could expose you to high voltages.
- There is a slight chance that your product could be damaged by an electrical storm, therefore we recommend that you unplug the product from the telephone socket during a storm.
- Do not use the handset in a hazardous area (i.e. where there is leaking gas).
- We recommend that this product is not used near intensive care medical equipment or by persons with pacemakers.
- This product can interfere with electrical equipment such as answering machine, television, radio and computers if placed too close. We recommend that you position the base unit at least one meter from such appliances.

**Aidapt Bathrooms Ltd, Lancots Lane, Sutton Oak, St Helens, WA9 3EX**  
**Telephone: +44 (0) 1744 745 020 • Fax: +44 (0) 1744 745 001 •**

**Web: [www.aidapt.com](http://www.aidapt.com)**  
**Email: [sales@aidapt.co.uk](mailto:sales@aidapt.co.uk)**